

ALPINE


Technical Support Tech Tip Document

Camera Select Setting for INE-W957HD, X008U and X009U

The Alpine system is designed with a sophisticated interlocking system that does not allow you to view video or make any system adjustment while the vehicle is in motion. The system requires the connection of a foot brake (Yellow/Black) and a parking brake (Yellow/Blue) wire. The foot brake (Yellow/Black) wire must be connected to the wire that pulses positive when the foot brake is applied. The parking brake (Yellow/Blue) wire must be connected to the vehicle's wire that pulses negative when the parking brake is applied. Once these wires are connected, follow the instructions below to access the advance menu settings.


1. Step and hold the foot brake.
2. Engage the parking brake.
3. Disengage the parking brake.
4. Engage the parking brake.
5. Release the foot brake.

Fig. 1

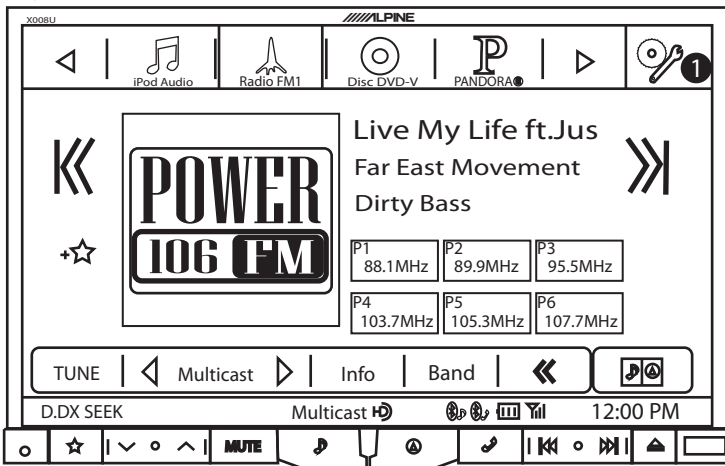


Step 1. Press the **1 Tools/Menu** soft key to access the advance menu settings.

Fig. 2

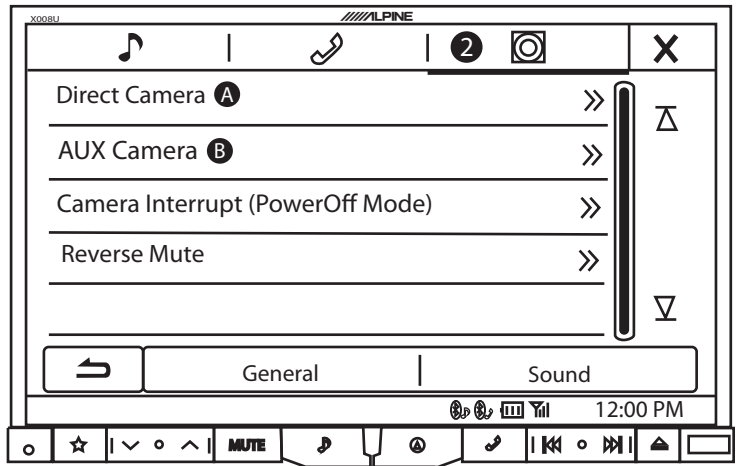


Step 2. Press the **2 Camera** soft key to access the camera settings.
 Step 3. Select the desired Camera application you are using **A Direct Camera** (Alpine) or **B Aux Camera** (RCA).

Fig. 3

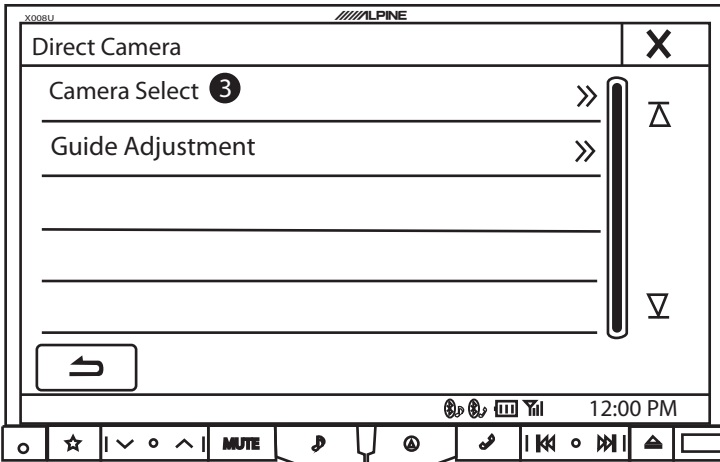

Step 4. Press the **3 Camera Select** soft key to access camera option.

Fig. 4

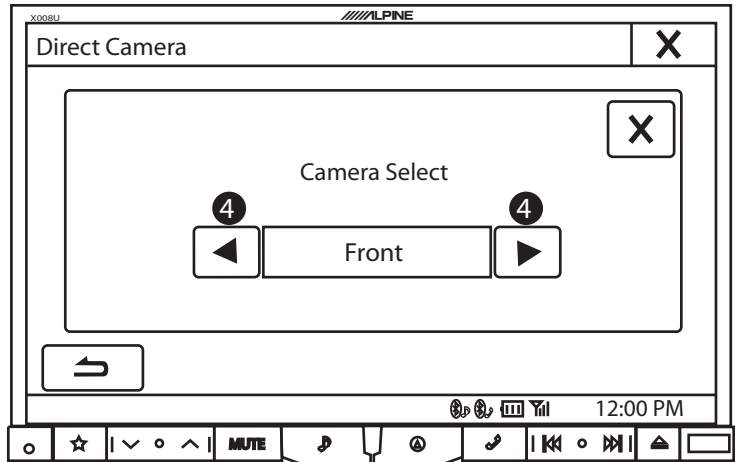

Step 4. Press the **4 Arrow** **◀▶** soft keys to select the desired camera option (OTHER, FRONT, REAR).