

How do I Set the clock on my Alpine CD player?

Rating: 5/5 from 1 votes | Last Updated: Thu, Oct 12, 2017 at 6:46 PM

Clock Adjust Procedure for CDA-105, CDA-117, CDE-133BT, CDE-134HD, CDE-135BT, CDE-136BT, CDE-HD137BT, CDE-HD138BT, CDE-143BT, CDE-147BT, CDE-HD148BT, CDE-HD149BT, CDE-153BT, CDE-154BT, UTE-42BT and UTE-52BT, CDE-W235BT

1. Press and hold audio/setup button for at least 2 seconds to activate the SETUP selection mode.
2. Turn the Rotary encoder to select GENERAL, and then press "ENTER".
3. Turn the Rotary encoder to select the CLOCK ADJ mode, and then press "ENTER". The time indication will blink.
4. Turn the Rotary encoder to adjust the hours while the time indication is blinking.
5. When the hour has been adjusted, press "ENTER".
6. Turn the Rotary encoder to adjust the minutes while the time indication is blinking.
7. Press and hold the Audio/Setup button for at least 2 seconds to

Clock Adjust Procedure for: CDA-9883, CDA-9885, CDA-9884, CDA-9886, CDA-9887

1. Press and hold audio/setup button for at least 2 seconds to activate the SETUP selection mode.
2. Turn the Rotary encoder to select GENERAL, and then press "ENTER".
3. Turn the Rotary encoder to select the CLOCK ADJ mode, and then press "ENTER". The time indication will blink.
4. Turn the Rotary encoder to adjust the hours while the time indication is blinking.
5. When the hour has been adjusted, press "ENTER".
6. Turn the Rotary encoder to adjust the minutes while the time indication is blinking.

Press and hold the Audio/Setup button for at least 2 seconds to

Posted by: [Alpine KB](#) - Thu, Oct 12, 2017 at 6:46 PM. This article has been viewed 106726 times.

Online URL: </article/how-do-i-set-the-clock-on-my-alpine-cd-player.html>